



RFID READER USER'S GUIDE

Settings



Turn On Power

- Press and hold the power button for approximately three seconds

Turn On/Off Sound (Beep)

- Press and hold the **Multi/One** button (Labeled "C" on the reader) for approximately three seconds

Adjust RF Power Sensitivity

- Reader sensitivity and read range is greatest when power setting is at max (30dBm)
- Use the **RF Power Control** Right Arrow key to increase the signal until only one LED is illuminated on the far right side of the RF Power Window

Switching Between USB and Bluetooth

- Press the **Bluetooth/USB** button to change between either Bluetooth or USB connection setting (reader has a USB icon on the button).
- The current setting will be indicated by either a blinking Bluetooth (BT) or USB LED.

Switching between Bluetooth Human Interface Device (HID) and Serial Port Protocol (SPP)

- When using ViewIn, the reader should be set to the Bluetooth HID setting to act as a keyboard
- Press and hold the **RF Power Control** Left Arrow key for approximately three seconds until the RF Power Window flashes. The SPP or Bluetooth LED should turn off after a moment.
- Bluetooth pairing to a mobile device can be inhibited if Bluetooth SPP is active. Check the top right of the reader to see if an LED is illuminated for either the SPP or BLE Bluetooth modes. Neither should be illuminated.

Note: Follow all local regulatory requirements and appropriate safety precautions when using the RFID Reader. (See User Guide for further information.)

Switching Between Single and Multiple Tag Scanning

- Press the **Multi/One** button to switch between single tag and multiple tag reading.
- ViewIn will only register the first tag read at a time; therefore having the reader in either setting will not compromise your ability to scan RFID tags.
- If you are scanning a seal that is in close proximity to another seal, or RFID tag, you may want to switch to single tag scanning to prevent unintentionally scanning anything but the desired seal.

Scanning a Tag

- Press and hold the **Scan** button until the serial number is read.
- You may need to move the reader closer toward the seal, or adjust the orientation of the reader to ensure line of sight to the RFID tags.
- When scanning tags, the **Scan LED** will first be illuminated when the **Scan** button is pressed and turn off when a tag is successfully scanned.



860 Salem Street
Groveland, MA 01834 USA
Telephone: 781-438-7000
Fax: 978-469-6528
www.chesterton.com

Chesterton ISO certificates available on www.chesterton.com/corporate/iso

© 2018 A.W. Chesterton Company
® Registered trademark owned by A.W. Chesterton Company
in USA and other countries, unless otherwise noted.

Chesterton ISO certificates available on
www.chesterton.com/corporate/iso

ViewIn is a trademark of A.W. Chesterton Company.
Technical data reflects results of laboratory tests and is intended to indicate general characteristics only. A.W. Chesterton Company disclaims all warranties express or implied, including warranties of merchantability and fitness for a particular purpose. Liability, if any, is limited to product replacement only. Any images contained herein are for general illustrative or aesthetic purposes only and are not intended to convey any instructional, safety, handling or usage information or advice respecting any product or equipment. Please refer to relevant Safety Data Sheets, Product Data Sheets, and/or Product Labels for safe use, storage, handling, and disposal of products, or consult with your local Chesterton sales representative.