
PLAN 32

Clean Flush

What	Clean flush from an external source.
Why	To cool and lubricate the seal faces; to provide clean fluid at the seal interface and prevent the buildup of solids in dirty process fluids.
When	Used with a product with excessive solids,

a low vapor pressure.

crystallizing product, or a product with

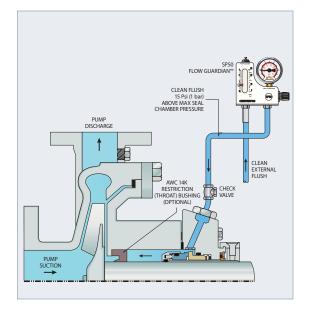

KEY

1 — From External Source

2 — Flush (F)

4 — Seal Chamber

3 — Quench/Drain (Q/D)

FI-Flow Indicator

PI—Pressure Indicator

TI—Temperature Indicator

